



# **QUICK SETUP GUIDE**

Before using the TV, please read this guide thoroughly and retain it for future reference.

***English***

### Declaration

---

Any content and service accessed through this device, while only intended for individual non-commercial use, shall be the property of the applicable third party and subject to protection by regulations and laws on copyright, patent, trademark and other intellectual property rights. No part of such content and service may be modified, duplicated, published, uploaded, distributed, translated, marketed, or used to make and distribute products derived from it without the prior permission of the content owner or service provider.

You acknowledge and agree explicitly that you will solely bear the risk associated with the use of this device, and further you will solely bear any risk related to satisfactory quality, performance and accuracy for any content and service accessed through this device. To the maximum extent permitted by applicable law, this device and any third party's content and service is provided as it is without any guarantee, express or implied.

Manufacturer hereby declare explicitly that Manufacturer shall not be held liable for any guarantee and conditions, express or implied, related to this device and any content and service, including but not limited to warranty on marketability, satisfactory quality, fitness for a particular purpose, accuracy, quiet use and non-violation of any third party's rights; to the maximum extent permitted by applicable law, Manufacturer gives no guarantee on the accuracy, validity, timeliness, legitimacy and completeness of any content or service provided through this device, or the fitness of such device, content or service for your particular requirement, or the protection from interruption and error during operation of such device, content or service; to the maximum extent permitted by applicable law, in any case, including fault or neglect, Manufacturer shall not be held liable for legal actions or indemnity obligation arising from any consequence as a result of or related to any information loaded in this device or use of such device, content or service by you or any third party.

Any content and service provided as it is together with this device shall be the property of the applicable third party, therefore Manufacturer gives no declaration or warranty on modification, suspension, cancellation, termination or abortion thereof, and shall not be held liable for legal actions or indemnity obligation arising thereof.

Manufacturer reserves the rights to restrict the use or access of certain content or service. As the content and service are transmitted through third party's network and transmission facilities, Manufacturer undertakes no customer service thereof or the obligation for such customer service.

## Important Safety Precautions



This symbol alerts user about the presence of a dangerous voltage not isolated inside the product which can be sufficiently powerful to constitute a risk of electrocution.



This symbol alerts user about the presence of important operating instructions and maintenance in the document enclosed in the package.



### ATTENTION

**RISK OF SHOCK  
ELECTRIC**



Do not open the back cover.

In no case the user is allowed to operate inside the TV set. Only a qualified technician is entitled to operate.



Class II product: This symbol indicates that it does not require a safety connection of protective earthing (ground).



AC voltage: This symbol indicates that the rated voltage marked with the symbol is AC voltage.

## Disposal of Used Electrical & Electronic Equipment



Packaging and electrical goods should be recycled appropriately, and not treated as household waste. Please dispose of this equipment at your applicable collection point for the recycling of electrical & electronic equipment waste. By ensuring the correct disposal of this product, you will help prevent potentially hazardous to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources. Please do not therefore dispose of your old electrical and electronic equipment with your household waste. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

## Important Safety Precautions

### Warning

---

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using stands recommended by the manufacturer of the television set.
- Only using furniture that can safely support the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls.

If your existing television set is being retained or relocated, the same considerations as above should be applied.

## Important Safety Precautions

### Safeguards

---

Please read the following safeguards for your TV and retain for future reference. Always follow all warnings and instructions marked on the television.

#### 1. A note about safety and operating instructions

Read and follow all safety and operating instructions, and retain them safely for future reference.

#### 2. Heed Warnings

Adhere to all warnings on the appliance and in the operating instructions.

#### 3. Cleaning

Unplug the TV from the wall outlet before cleaning. Do not use liquid, abrasive, or aerosol cleaners. Cleaners can permanently damage the cabinet and screen. Use a lightly dampened cloth for cleaning.

#### 4. Wall Mount Bracket

Wall mount bracket is only available for some models. If wall bracket is not supplied with this product, you can buy it at the local market.

Please refer to the Installing the Wall Mount Bracket page of Quick Setup Guide for dimensions.

#### 5. Water and Moisture

Avoid dripping or splashing of liquids onto the product. Objects filled with liquids, such as vases, should not be placed on the product.

#### 6. Setting

Do not place this TV on an unstable cart, stand or table. Placing the TV on an unstable base can cause the TV to fall, resulting in serious personal injuries as well as damage to the TV. Use only a cart, stand, bracket or table recommended by the manufacturer or salesperson.

#### 7. Ventilation

Slots and openings in the cabinet are provided for ventilation, to ensure reliable operation of the TV and to protect it from overheating. Do not cover the ventilation openings in the cabinet and never place the set in a confined space such as built-in cabinet unless proper ventilation is provided. Leave a minimum 10cm gap all around the unit, the rear of the TV should be 6cm away from the wall.

#### 8. Power Source

This TV should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your home, consult your appliance dealer or local power company.

## Important Safety Precautions

### 9. Power-Cord Protection

Power- supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plug, wall outlets, and the point where they exit from the TV. MAIN plug is used as the disconnect device, the disconnect device shall remain readily operable.

### 10. Lightning

For added protection for this TV during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the TV due to lightning or power-line surge.

### 11. Power Lines

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. While installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

### 12. Overloading

Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

### 13. Object and Liquid Entry

Never push objects of any kind into this TV through openings as they may touch dangerous voltage points or short-out parts that could result in fire or electric shock. Never spill liquid of any kind on or into the TV.

### 14. Outdoor Antenna Grounding

If an outside antenna or cable system is connected to the TV, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges.

### 15. Servicing

Do not attempt to service this TV yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

### 16. Damage Requiring Service

Unplug the TV from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- (a) When the power - supply cord or plug is damaged.
- (b) If liquid has been spilled, or objects have fallen into the TV.
- (c) If the TV has been exposed to rain or water.

## Important Safety Precautions

- (d) If the TV does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the TV to its normal operation.
- (e) If the TV has been dropped or the cabinet has been damaged.
- (f) When the TV exhibits a distinct change in performance - this indicates a need for service.

### 17. Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

### 18. Safety Check

Upon completion of any service or repair to the TV, ask the service technician to perform safety checks to determine that the TV is in safe operating condition.

### 19. Heat

The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

### 20. Fire

The product should be situated away from naked flame sources such as lighted candle.

### 21. Off-gassing

The TV smells of plastic is normal and will dissipate over time.



Do not mix and use new batteries with old batteries, or batteries with different types. Do not expose batteries to heat such as direct sunlight or fire. Make sure the batteries' positive and negative ends are facing the correct direction.



The device should not be exposed to dripping and spraying and it cannot be placed under objects filled with liquids.



To fully disconnect the TV, remove power plug from wall socket. Be sure to have the wall socket and power plug readily accessible.

## Contents

**Product image is only for reference, actual product may vary in appearance.  
Parts of the software function changes with the system upgrade.**

### Contents

|                                                 |    |
|-------------------------------------------------|----|
| Accessories List.....                           | 1  |
| Installing the Stand or Wall mount bracket..... | 2  |
| TV Front.....                                   | 4  |
| TV Rear .....                                   | 5  |
| Making Connections .....                        | 7  |
| Remote Control .....                            | 10 |
| Turning the TV on for the First Time .....      | 13 |
| Specifications .....                            | 14 |
| Other Information.....                          | 16 |

### Accessories List

The following accessories are included with TV:

|                       |                    |                 |
|-----------------------|--------------------|-----------------|
| Quick Setup Guide × 1 | Remote Control × 1 | AAA Battery × 2 |
| Base Stand × 2        | Screw × 4          |                 |

#### NOTE

- The accessories may be different from the list above due to different models, countries / regions, please refer to the actual accessory bag.

## Installing the Stand or Wall mount bracket

 
### ⚠ CAUTION

- Be sure to disconnect the A/C power cord before installing a stand or wall mount brackets.
- The display on your TV is fragile. Make sure the TV screen is not scratched or damaged by hard objects or from pressure.
- After the installation is complete, make sure the TV is steady on a table or firmly attached to a wall mount, before removing all protective film, if any.

### ► Installing the Stand

Follow the illustrations and textual instructions below to complete the installation steps:

1. Carefully place your TV face-down on a soft, flat surface to prevent damage to the TV or scratching to the screen.
2. Remove the Base Stand from the accessory bag and then insert the stands into the bottom slots of the TV.
3. Secure the Base Stand to the TV with the screws in accessory tightly.

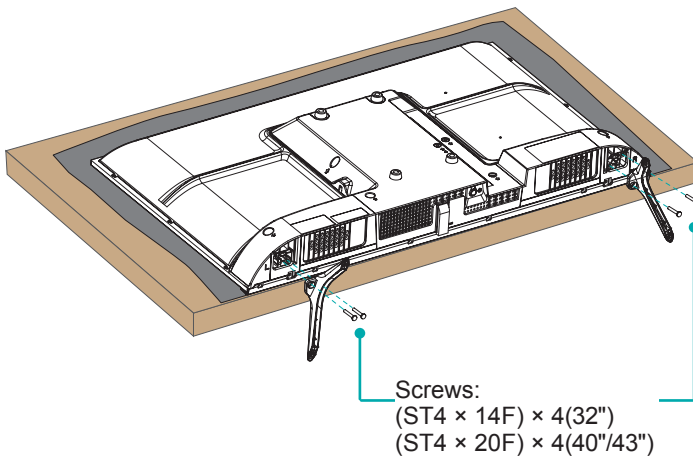

# Installing the Stand or Wall mount bracket

 
## ▶ Installing the wall mount bracket

Before mounting the TV, remove the TV stand if you have already attached it, and make sure the wall mount bracket supports the weight of your TV.


 **CAUTION**

When mounting the TV on a wall, follow instructions provided with the wall mount bracket. If it is not correctly mounted, the TV may fall and cause property damage or personal injury.

- Place spacers between the TV and bracket.
- Make sure the tilt angle between the TV screen and the vertical surface is no more than 15 degrees.
- Standard dimensions are shown below.

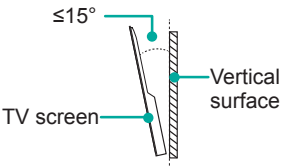

|                              |                                        |
|------------------------------|----------------------------------------|
| Wall mount hole pattern (mm) | 100 × 200 (32"/40")<br>200 × 200 (43") |
| Wall mount screw size        | M6                                     |

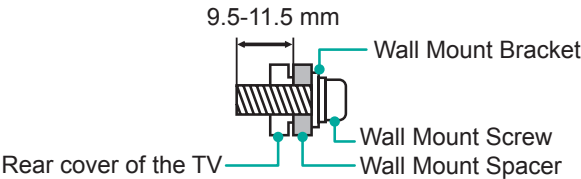 



 **NOTE**

- The diameter and length of the screws differ depending on the wall mount bracket model.
- Wall mount bracket is optional. Your TV may not have wall mount bracket. Please refer to the actual accessories.

## TV Front
  
### TV Front

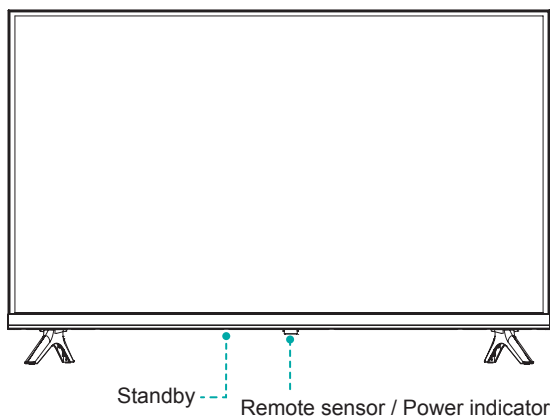

| Item                                                                                                 | Description                                                                                                              |
|------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------|
| <b>Remote sensor</b>                                                                                 | Receive remote signals from the remote control.<br>Do not put anything near the sensor, as its function may be affected. |
| <b>Power indicator</b>                                                                               | The light is red in standby mode.                                                                                        |
| <br><b>Standby</b> | Press the button to turn on / off the TV.                                                                                |



#### NOTES

  - The Picture is Only for Reference.
- Powering on the TV requires several seconds to load programs. Do not rapidly turn the TV off as it may cause the TV work abnormally.

## TV Rear

### TV Rear

32"

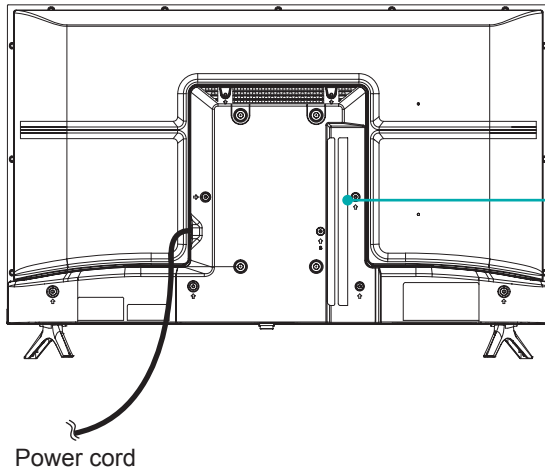


#### NOTES

- Check the jacks for position and type before making any connections. Loose connections can result in image or color problems. Make sure that all connections are tight and secure.
- Not all A/V devices have the ability to connect to a TV, please refer to the user's manual of your A/V device for compatibility and connections procedure.
- Before connecting external equipment, remove the mains plug from the wall socket. Otherwise, it may cause electric shock.

## TV Rear

### TV Rear

 40"/43"

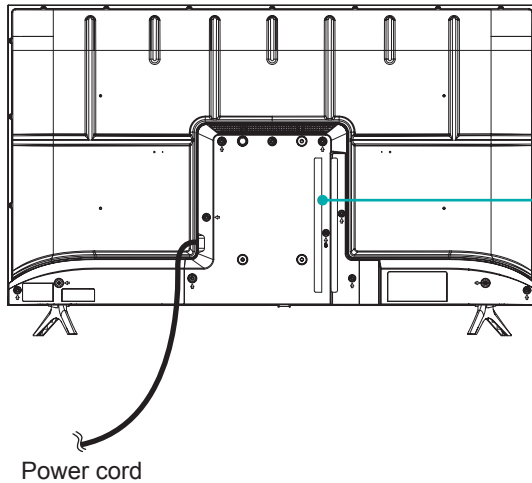

### NOTES

 
- Check the jacks for position and type before making any connections. Loose connections can result in image or color problems. Make sure that all connections are tight and secure.
- Not all A/V devices have the ability to connect to a TV, please refer to the user's manual of your A/V device for compatibility and connections procedure.
- Before connecting external equipment, remove the mains plug from the wall socket. Otherwise, it may cause electric shock.

## Making Connections

### ► LAN (Wired setup)

Connect your TV to your network by connecting the LAN port on the back of your TV to an external modem or router using a LAN (Ethernet/Cat 5) cable. See the illustration below.


- We recommend to use a modem or router that supports Dynamic Host Configuration Protocol (DHCP). Modems and routers that support DHCP automatically provide the IP address, subnet mask, gateway, and DNS, so you don't have to enter them manually. Most home networks already have DHCP.

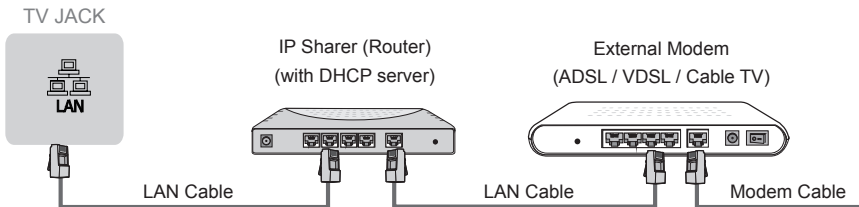

### Wireless setup

Connect your TV to your network wirelessly, you need a wireless router or modem. See the illustration below.





 
- The built-in Wireless LAN Adapter supports the IEEE 802.11a/b/g/n/ac communication protocols. We recommend using IEEE 802.11n router. Low transfer rates for b/g may have the influence on the quality of streamed videos and other media.

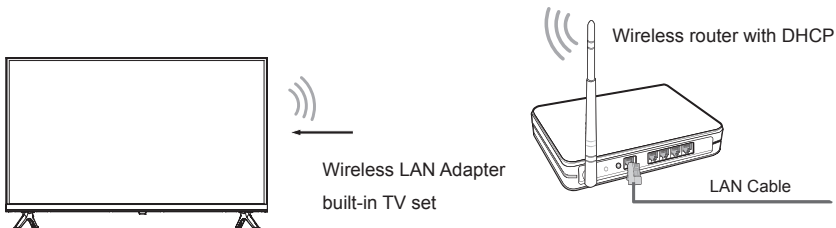

### ■ NOTES


- You must use the built-in Wireless LAN Adapter to use a wireless network because the set doesn't support external USB network adapter.
- If the wireless router supports DHCP, your TV can connect more easily to the wireless network.
- If you apply a security system other than the systems listed below, it will not work with the TV.  
Security system: WPA, WEP, WPA2.
- In order to guarantee smooth network, the distance between router and TV should be less than 10 meters.
     
## Making Connections
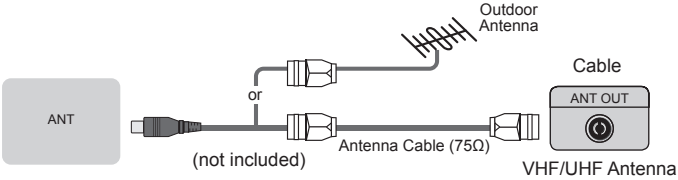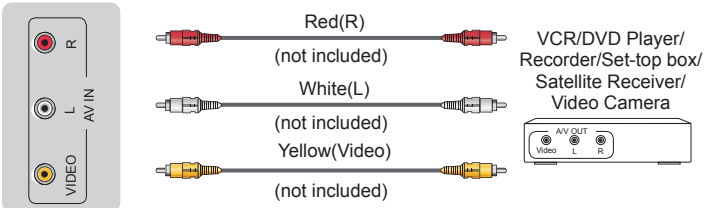
|                                                                                                                                                     |                   |                                                                                                                                                                                                                                  |
|-----------------------------------------------------------------------------------------------------------------------------------------------------|-------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>ANT</b>                                                                                                                                          |                   |  <p>ANT</p> <p>Outdoor Antenna</p> <p>Antenna Cable (75Ω)</p> <p>Cable</p> <p>ANT OUT</p> <p>VHF/UHF Antenna</p>                                |
| <b>DIGITAL AUDIO OUT</b>                                                                                                                            |                   |  <p>DIGITAL AUDIO OUT</p> <p>DIGITAL AUDIO cable (not included)</p> <p>Audio Amplifier/Speaker</p>                                              |
| <b>HDMI</b>                                                                                                                                         | <b>HDMI (ARC)</b> |  <p>HDMI ARC</p> <p>HDMI cable (not included)</p> <p>Audio Amplifier/Speaker</p>                                                                |
|                                                                                                                                                     | <b>HDMI</b>       |  <p>HDMI</p> <p>HDMI cable (not included)</p> <p>DVD/Blu-Ray/AV receiver/ Set-top Box</p>                                                       |
| <b>AV IN</b>                                                                                                                                        |                   |  <p>AV IN</p> <p>Red(R)</p> <p>White(L)</p> <p>Yellow(Video)</p> <p>VCR/DVD Player/ Recorder/Set-top box/ Satellite Receiver/ Video Camera</p> |
| <b>HEADPHONE</b>                                                                                                                                    |                   |  <p>HEADPHONE</p> <p>Headphone (not included)</p>                                                                                             |
| <p><b>NOTE</b></p> <ul style="list-style-type: none"> <li>Excessive sound pressure from earphones and headphones can cause hearing loss.</li> </ul> |                   |                                                                                                                                                                                                                                  |

## Making Connections

 
### USB



#### NOTES

- When connecting a hard disk or a USB hub, always connect the mains adapter of the connected device to the power supply. Exceeding a total current consumption may result in damage. The USB1.1 and USB2.0 devices maximum current consumption are 500mA.
- For individual non-standard high-capacity mobile hard disk, if its impulse current is greater than or equal 1A, it may cause TV-rebooting or self-locking. So the TV does not support it.
- The USB port supports a voltage of 5V.
 
## Remote Control

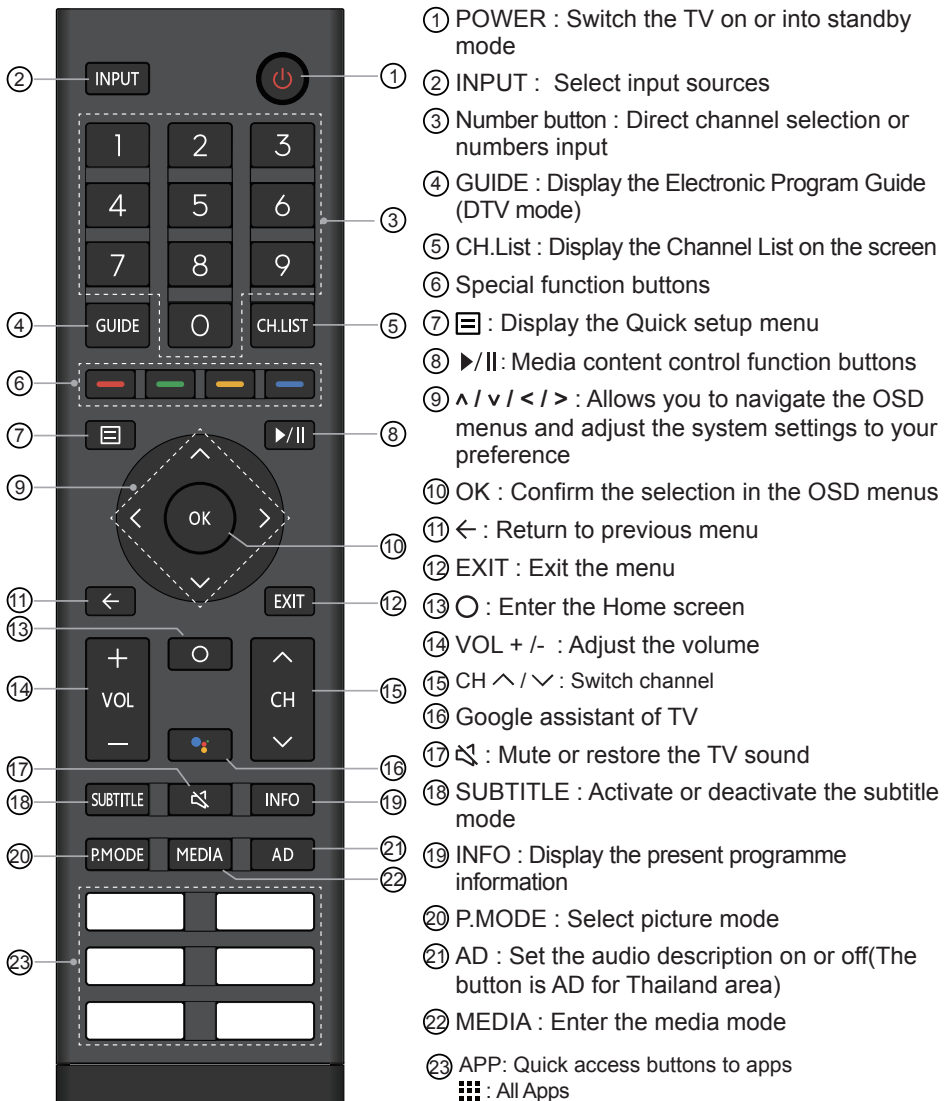

### Bluetooth remote control module specifications

AB1613

 
Frequency Range: 2.402~2.480GHz

Output Power(Max.): +4.5dBm


**NOTE:** The included remote control will vary depending on model, country. Check information according to the actual remote control in the accessory bag.

## Remote Control


### ► Installing Batteries in the Remote Control



 1. Slide the back cover to open the battery compartment of the remote control.



 2. Insert two AAA size batteries. Make sure to match the (+) and ( - ) ends of the batteries with the (+) and ( - ) ends indicated in the battery compartment.



3. Close the battery compartment with the cover.

### 📌 NOTES

- Product image is only for reference, actual product may vary in appearance.

#### Handling the Batteries

- Incorrect use of batteries may cause corrosion or battery leakage, which could cause fire, personal injury or damage to property.
- Only use the battery type indicated in this manual.
- Do not mix old and new batteries or different types of batteries.
- Do not dispose of used batteries as domestic waste. Dispose of them in accordance with local regulations.

### ► Pairing the Remote Control (Only available on certain models and bluetooth remote control.)

 
1. Pair the remote to the TV after you power it on. Keep the remote control within 10 feet from the TV.
2. Press the [  ] button on your remote to enter the Home screen, and then select the  icon to access the Settings menu. You can also press the [  ] button on your remote to enter the **Menu** in TV mode and then select **Remotes & Accessories**.
3. Press the [  ] button on your remote at least 3 seconds. The remote indicator light is red to start pairing.
4. Select the corresponding remote model then a "pairing-connecting-paired" information will display on the screen.
5. Paired successfully. If it did not pair successfully, repeat step 1.

### NOTES

- If an unknown error occurred with the remote then it could have been caused by interference. Try to remove what's causing the interference and pair it again.
- If an unknown error occurred in the remote control while the battery power is normal, you can take out the batteries, press any key for 1~2 seconds, and insert them back. Then the remote control will work normally.
- The remote cannot be paired to the TV while the TV is in standby mode.

### ▶ Remote Control Operation Range

1. The remote control can work at a distance of up to 8 meters in front of the TV set.
2. The remote control angle: taking the remote sensor as an apex, 6 meters away, its controlled horizontal angle is within  $\pm 30^\circ$ , while the vertical angle is within  $\pm 15^\circ$ .
3. The operating distance may vary depending on the brightness of the room.

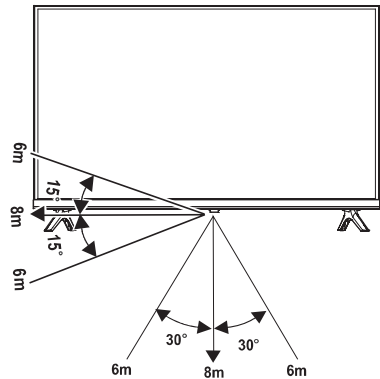

## Turning the TV on for the First Time

### Turning the TV on for the First Time

1. Connect the mains cable to the mains socket after you have completed all the connections.
2. The first time you turn the TV on, it will go straight into the Setup Wizard.
3. Please complete your initial configuration with setup wizard before the experience of Android TV. The prompt menu of setup wizard may vary per different models or countries.
4. Press the [  $\wedge$  /  $\vee$  /  $<$  /  $>$  ] buttons to navigate the menu and change the settings. Press the [OK] button to confirm.

|                                             |                                                                                                                                                                                                                                         |
|---------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Language</b>                             | Select your desired language to be displayed on the menu.                                                                                                                                                                               |
| <b>Quickly set up TV with Android phone</b> | You will be asked to quickly set up your TV with your Android phone. You can easily transfer your Android phone's Wi-Fi network and Google account to your TV. You can also skip it.                                                    |
| <b>Wireless Network</b>                     | Select network from the list to be displayed on the menu or add a hidden network manually. You can also connect an Ethernet cable to connect to the internet.                                                                           |
| <b>Google Account Setup Screen</b>          | Link your TV with Google account to easily transfer your data and automatically set up your TV, then setting up from your Android phone. You can also skip it.                                                                          |
| <b>Country</b>                              | Select the Country where you will operate the TV.                                                                                                                                                                                       |
| <b>Password</b>                             | Please set password, "0000" is invalid password.                                                                                                                                                                                        |
| <b>TV Mode</b>                              | Select "Home Mode" or "Store Mode".                                                                                                                                                                                                     |
| <b>Chromecast built-in</b>                  | Let this device be detected as a Google Cast device and allow Google Assistant and other services to wake this device up to respond to Cast commands, even when on standby and the screen is off. You can also select "Off" to skip it. |
| <b>Source &amp; Channel</b>                 | Select your tuner mode to be displayed on the menu, then start channel scan.                                                                                                                                                            |
| <b>Success</b>                              | Congratulations!<br>Setup is completed. Press "Finish" to use your TV.                                                                                                                                                                  |
| <b>Disclaimer</b>                           | Accept All EULA Items.<br>Help promote the TV user experience.                                                                                                                                                                          |

## Specifications

☑ Features, appearance and specifications are subject to change without notice.

| Item                               |                     | 32"                                                                                                                                               | 40"                |
|------------------------------------|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|--------------------|
| Dimension<br>(W × H × D)           | Without Stand       | 717 × 428 × 86 mm                                                                                                                                 | 893 × 513 × 86 mm  |
|                                    | With Stand          | 717 × 469 × 160 mm                                                                                                                                | 893 × 559 × 182 mm |
| Weight                             | Without Stand       | 3.8 kg                                                                                                                                            | 5.4 kg             |
|                                    | With Stand          | 3.9 kg                                                                                                                                            | 5.5 kg             |
| Active Screen Size (Diagonal)      |                     | 80 cm                                                                                                                                             | 100 cm             |
| Screen resolution                  |                     | 1366 × 768                                                                                                                                        | 1920 × 1080        |
| Speaker power                      |                     | 10 W + 10 W                                                                                                                                       | 10 W + 10 W        |
| Power consumption                  |                     | Please refer to the rating label.                                                                                                                 |                    |
| Power supply                       |                     | AC 100-240V ~ 50/60Hz                                                                                                                             |                    |
| Receiving systems                  | Analog              | PAL-D/K, B/G, I, SECAM-D/K, B/G                                                                                                                   |                    |
|                                    | Digital             | DVB-T/T2, DVB-C                                                                                                                                   |                    |
| Wireless LAN Module specifications | Model               | WF-M38G-UTH1                                                                                                                                      |                    |
|                                    | Frequency Range     | 2.4~2.4835GHz                                                                                                                                     |                    |
|                                    | Output Power (Max.) | 2.4~2.4835GHz 17dBm                                                                                                                               |                    |
| Bluetooth Module specifications    | Model               | WF-M38G-UTH1                                                                                                                                      |                    |
|                                    | Frequency Range     | 2.4~2.4835GHz                                                                                                                                     |                    |
|                                    | Output Power (Max.) | 2.4~2.4835GHz, Class1, 5.5dBm                                                                                                                     |                    |
| Environmental conditions           |                     | Temperature: 5°C - 45°C<br>Humidity: 20% - 80% RH<br>Atmospheric pressure: 86 kPa - 106 kPa                                                       |                    |
| HDMI Input                         |                     | RGB / 60 Hz (640×480, 800×600, 1024×768)<br>YUV / 60 Hz (480 I, 480 P, 720 P, 1080 I, 1080 P)<br>YUV / 50Hz (576 I, 576 P, 720 P, 1080 I, 1080 P) |                    |

## Specifications

| Item                               |                     | 43"                                                                                                                                               |
|------------------------------------|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| Dimension<br>(W × H × D)           | Without Stand       | 955 × 558 × 87 mm                                                                                                                                 |
|                                    | With Stand          | 955 × 606 × 182 mm                                                                                                                                |
| Weight                             | Without Stand       | 6.4 kg                                                                                                                                            |
|                                    | With Stand          | 6.5 kg                                                                                                                                            |
| Active Screen Size (Diagonal)      |                     | 108 cm                                                                                                                                            |
| Screen resolution                  |                     | 1920 × 1080                                                                                                                                       |
| Speaker power                      |                     | 10 W + 10 W                                                                                                                                       |
| Power consumption                  |                     | Please refer to the rating label.                                                                                                                 |
| Power supply                       |                     | AC 100-240V ~ 50/60Hz                                                                                                                             |
| Receiving systems                  | Analog              | PAL-D/K, B/G, I, SECAM-D/K, B/G                                                                                                                   |
|                                    | Digital             | DVB-T/T2, DVB-C                                                                                                                                   |
| Wireless LAN Module specifications | Model               | WF-M38G-UTH1                                                                                                                                      |
|                                    | Frequency Range     | 2.4~2.4835GHz                                                                                                                                     |
|                                    | Output Power (Max.) | 2.4~2.4835GHz 17dBm                                                                                                                               |
| Bluetooth Module specifications    | Model               | WF-M38G-UTH1                                                                                                                                      |
|                                    | Frequency Range     | 2.4~2.4835GHz                                                                                                                                     |
|                                    | Output Power (Max.) | 2.4~2.4835GHz, Class1, 5.5dBm                                                                                                                     |
| Environmental conditions           |                     | Temperature: 5°C - 45°C<br>Humidity: 20% - 80% RH<br>Atmospheric pressure: 86 kPa - 106 kPa                                                       |
| HDMI Input                         |                     | RGB / 60 Hz (640×480, 800×600, 1024×768)<br>YUV / 60 Hz (480 I, 480 P, 720 P, 1080 I, 1080 P)<br>YUV / 50Hz (576 I, 576 P, 720 P, 1080 I, 1080 P) |

## Other Information



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, Pro Logic, and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. Copyright 1992-2019 Dolby Laboratories. All rights reserved.



For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, DTS and the Symbol together, and DTS Studio Sound are registered trademarks and/or trademarks of DTS, Inc. in the United States and/or other countries. © DTS, Inc. All Rights Reserved.