



QUICK SETUP GUIDE

Before using the TV, please read this guide thoroughly and retain it for future reference. For more detailed instructions, please see the User Manual.

English

Important Safety Precautions



This symbol alerts user about the presence of a dangerous voltage not isolated inside the product which can be sufficiently powerful to constitute a risk of electrocution.



This symbol alerts user about the presence of important operating instructions and maintenance in the document enclosed in the package.



ATTENTION

**RISK OF SHOCK
ELECTRIC**



Do not open the back cover.

In no case the user is allowed to operate inside the TV set. Only a qualified technician is entitled to operate.



Class II product: This symbol indicates that it does not require a safety connection of protective earthing (ground).



AC voltage: This symbol indicates that the rated voltage marked with the symbol is AC voltage.

Disposal of Used Electrical & Electronic Equipment



Packaging and electrical goods should be recycled appropriately, and not treated as household waste. Please dispose of this equipment at your applicable collection point for the recycling of electrical & electronic equipment waste. By ensuring the correct disposal of this product, you will help prevent potentially hazardous to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources. Please do not therefore dispose of your old electrical and electronic equipment with your household waste. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Figures and illustrations in this manual are provided for reference only and may differ from actual product appearance.

Parts of the software function changes with the system upgrade.

Contents

Accessories List.....	1
Installing the Stand or Wall mount bracket	2
TV Front.....	4
TV Rear	5
Making Connections	8
Remote Control	11
Turning the TV on for the First Time	13
Specifications	14

Accessories List

The following accessories are included with TV:

Quick Setup Guide × 1	Base Stand × 2	Remote Control × 1
AAA Battery × 2	Screw × 4	RCA jack to AV Cable × 1 (for 32" / 40")

NOTE

- The accessories may be different from the list above due to different models, countries / regions, please refer to the actual accessory bag.

 
Installing the Stand

⚠ CAUTION

- Be sure to disconnect the A/C power cord before installing a stand or Wall-Mount brackets.
- The LED display is very fragile, and must be protected at all times when installing the base stand. Be sure that no hard or sharp object, or anything that could scratch or damage the LED display, comes into contact with it. DO NOT exert pressure on the front of the TV at any time because the screen could crack.
- After the installation is complete, make sure the TV is steady on a table or firmly attached to a wall mount, before removing all protective film, if any.

Follow the illustrations and textual instructions below to complete the installation steps:


1. Carefully place your TV face-down on a soft, flat surface to prevent damage to the TV or scratching to the screen.
2. Remove the 2 stands from the accessory bag and then insert the stands into the bottom slots of the TV.
3. Secure the Base Stand to the TV with the 4 screws in accessory tightly.

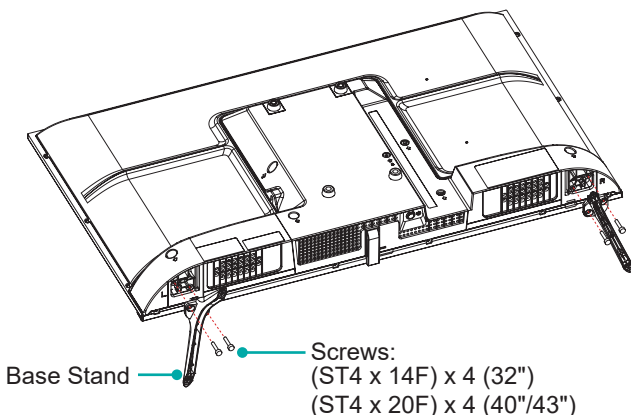

Installing the Stand or Wall mount bracket

Installing the Wall Mount Bracket

Wall-Mount hole pattern (mm)	100 × 200 (32"/40") 200 × 200 (43")
Wall-Mount screw size (mm)	M6

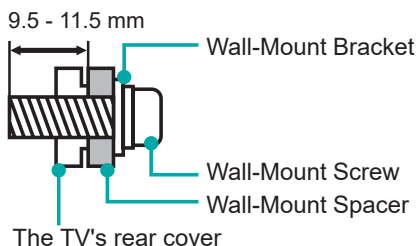 


 Follow instructions provided with the wall mount bracket.


 
 
NOTES

- The diameter and length of the screws differ depending on the wall mount bracket model.
- Wall mount bracket is optional, your device may not have wall mount bracket, please refer to the actual accessories.

TV Front

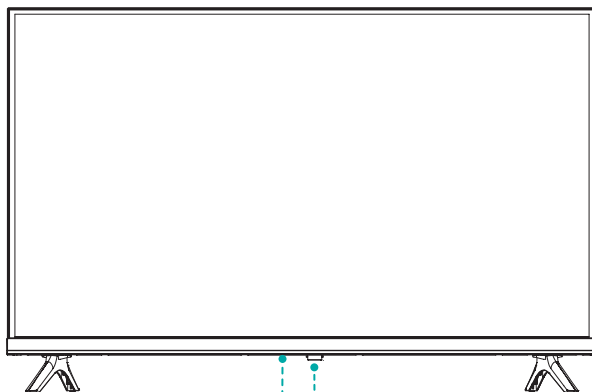

Standby / Source Remote sensor / Power indicator


Item	Description
Remote sensor	Receive remote signals from the remote control. Do not put anything near the sensor, as its function may be affected.
Power indicator	The light is red in standby mode.
 Standby / Source ⏻ / 🔍	<p>Press the button to power on the TV. Press and hold the button to power off the TV.</p> <p>Press the button to move the focus to “🔍”, press and hold the button to select among the different input signal sources.</p>
 VOL + / -	<p>Press the button to move the focus to “+” or “-”, press and hold the button to adjust the volume.</p>
 CH ^ / v	<p>Press the button to move the focus to “^” or “v”, press and hold the button to change the channel.</p>

NOTES

- The Picture is Only for Reference.
- Powering on the TV requires several seconds to load programs. Do not rapidly turn the TV off as it may cause the TV work abnormally.

TV Rear

 32"

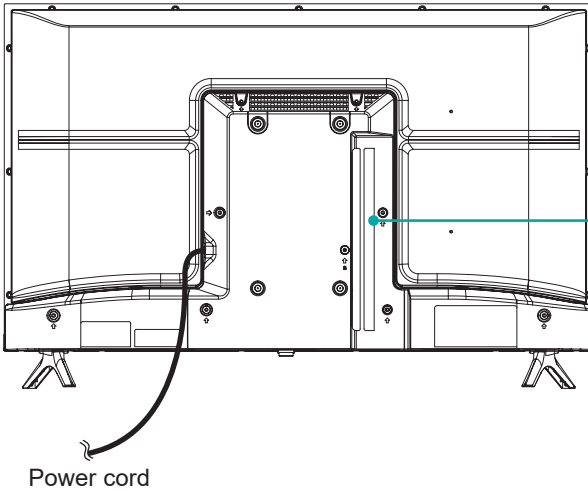

Power cord

 
NOTES

- ANT2 Jack supports power supply for satellite antenna (13/18V, 400mA max.)
- Check the jacks for position and type before making any connections. Loose connections can result in image or color problems. Make sure that all connections are tight and secure.
- Not all A/V devices have the ability to connect to a TV, please refer to the user's manual of your A/V device for compatibility and connections procedure.
- Before connecting external equipment, remove the mains plug from the wall socket. Otherwise, it may cause electric shock.



TV Rear

40"

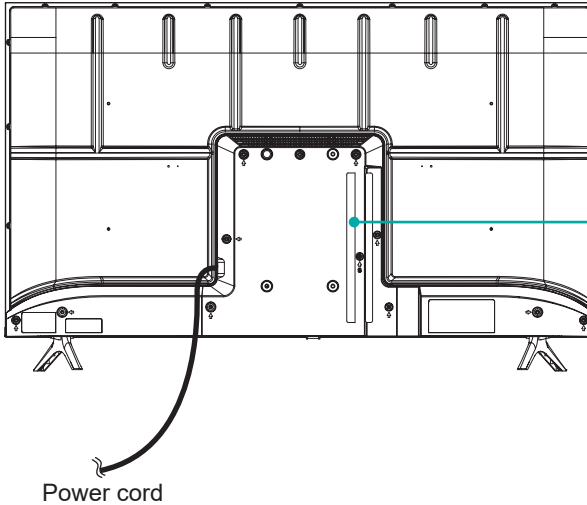


NOTES

- ANT2 Jack supports power supply for satellite antenna (13/18V, 400mA max.)
- Check the jacks for position and type before making any connections. Loose connections can result in image or color problems. Make sure that all connections are tight and secure.
- Not all A/V devices have the ability to connect to a TV, please refer to the user's manual of your A/V device for compatibility and connections procedure.
- Before connecting external equipment, remove the mains plug from the wall socket. Otherwise, it may cause electric shock.




TV Rear

 43"

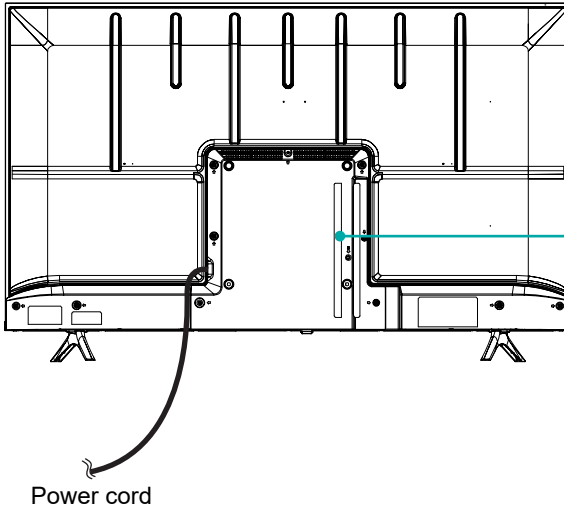

NOTES

 
- Check the jacks for position and type before making any connections. Loose connections can result in image or color problems. Make sure that all connections are tight and secure.
- Not all A/V devices have the ability to connect to a TV, please refer to the user's manual of your A/V device for compatibility and connections procedure.
- Before connecting external equipment, remove the mains plug from the wall socket. Otherwise, it may cause electric shock.




Making Connections

ANT

 
for 32"/40"

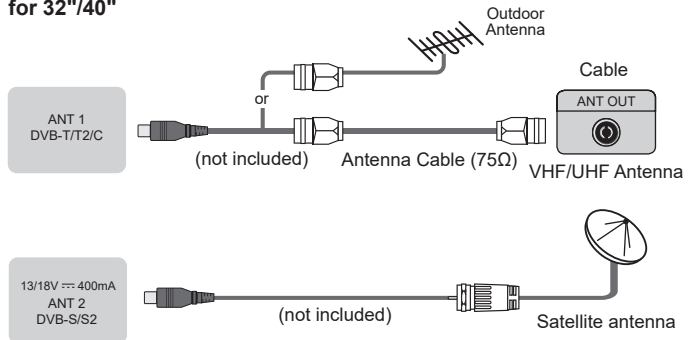

for 43"

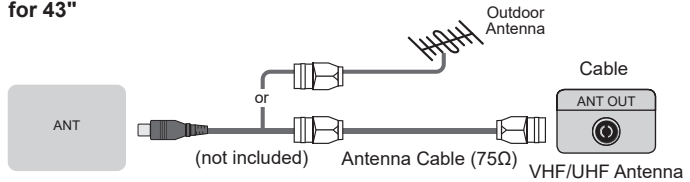 


DIGITAL AUDIO OUT

 


AV

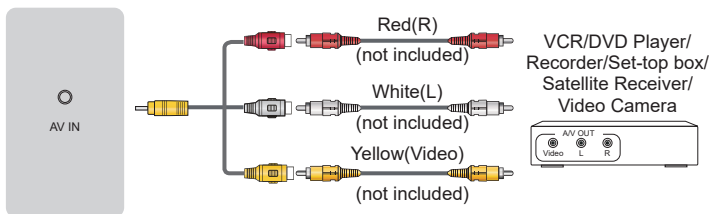 

 
 
for 32"/40"

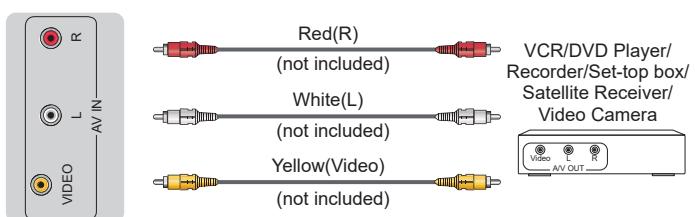


for 43"



Making Connections

HDMI	HDMI (ARC)	 <p>HDMI (ARC)</p> <p>HDMI cable (not included)</p> <p>Audio Amplifier/Speaker</p>
	HDMI	 <p>HDMI</p> <p>HDMI cable (not included)</p> <p>DVD/Blu-Ray/AV receiver/ Set-top Box</p>
HEADPHONE		 <p>HEADPHONE</p> <p>Headphone (not included)</p> <p>NOTE</p> <ul style="list-style-type: none"> Excessive sound pressure from earphones and headphones can cause hearing loss.
COMMON INTERFACE		<p>for 32"/40"</p>  <p>COMMON INTERFACE (CARD FACE FRONT)</p> <p>CAM CARD</p> <p>SMART CARD</p> <p>NOTES</p> <ul style="list-style-type: none"> Before you insert/remove the CI+ module, ensure that the TV is switched off. Then insert the CI card into the CI+ module in accordance with the Service Provider's instructions. Do not repeatedly insert or remove the Common Access Module as this may damage the interface and cause a malfunction. You must obtain a CI+ module and card from the service provider of the channels you want to watch. Insert the CI+ module with the SmartCard in the direction marked on the module and SmartCard. CI+ is not supported in some countries and regions; check with your authorized dealer.

 
USB




NOTES

- When connecting a hard disk or a USB hub, always connect the mains adapter of the connected device to the power supply. Exceeding a total current consumption may result in damage. The USB1.1 and USB2.0 devices maximum current consumption are 500mA.
- For individual non-standard high-capacity mobile hard disk, if its impulse current is greater than or equal 1A, it may cause TV-rebooting or self-locking. So the TV does not support it.
- The USB port supports a voltage of 5V.

 
Remote Control

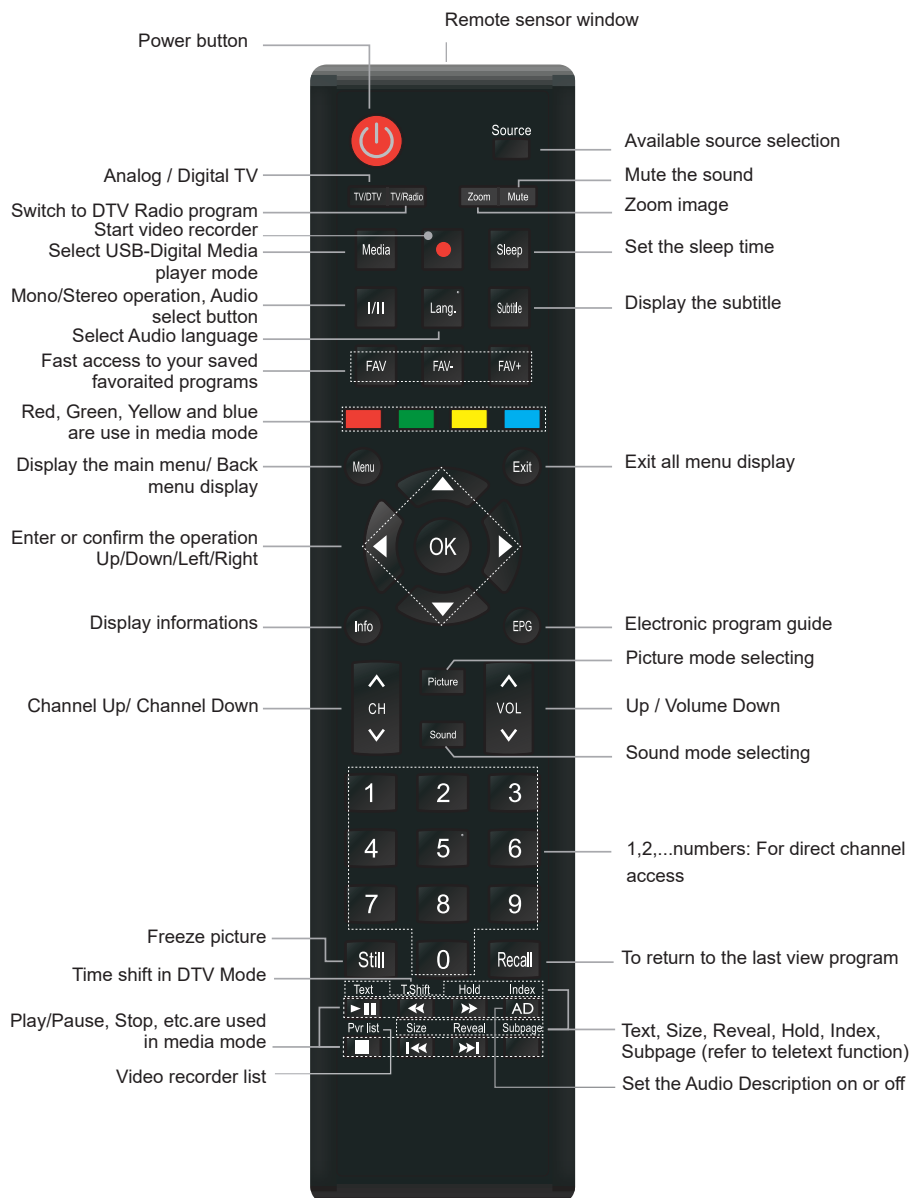

 
► Installing Batteries in the Remote Control



 1. Slide the back cover to open the battery compartment of the remote control.



 2. Insert two AAA size batteries. Make sure to match the (+) and (-) ends of the batteries with the (+) and (-) ends indicated in the battery compartment.



3. Close the battery compartment with the cover.

 
▣ NOTES

- Product image is only for reference, actual product may vary in appearance.

Handling the Batteries

- Incorrect use of batteries may cause corrosion or battery leakage, which could cause fire, personal injury or damage to property.
- Only use the battery type indicated in this manual
- Do not mix old and new batteries or different types of batteries .
- Do not dispose of used batteries as domestic waste. Dispose of them in accordance with local regulations.

► Remote Control Operation Range

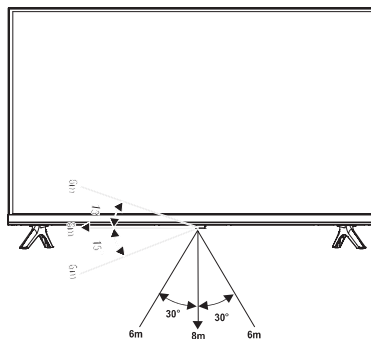

Turning the TV on for the First Time

Turning the TV on for the First Time

1. Connect the mains cable to the mains socket after you have completed all the connections.
2. The first time you turn the TV on, it will go straight into the Installation Guide.
3. Press the [**^** / **v** / **<** / **>**] buttons to navigate the menu and change the settings. Press the [**OK**] button to confirm.

Language	Select your desired language to be displayed on the menu.
Location	Using the D-pad arrows of your remote,choose your country.
Retail Mode	Choose retail mode on for shopping mall,keep retail mode off for home use.
Complete	Confirm your setting.
Tuning Setup	Set tuning mode.
Channel Tuning	Channel tuning.

Specifications

☑ Features, appearance and specifications are subject to change without notice.

If you encountered difficulty when setting up your TV, we suggest you refer to the troubleshooting tips in the User Manual.

Item		32"	40"
Dimension (mm)	Without Stand (W × H × D)	717 × 428 × 86 mm	893 × 513 × 86 mm
	With Stand (W × H × D)	717 × 469 × 160 mm	893 × 559 × 182 mm
Weight (kg)	Without Stand	3.6 kg	5.4 kg
	With Stand	3.7 kg	5.5 kg
Active Screen Size (Diagonal)		80 cm	100 cm
Screen resolution		1366 × 768	1920 × 1080
Audio power		6W + 6W	7W + 7W
Power consumption		55 W	70 W
Power supply		AC 100-240V ~ 50/60Hz	
Receiving systems	Analog	PAL-D/K, B/G, I, SECAM-D/K, B/G	
	Digital	DVB-T/T2, DVB-C, DVB-S/S2	
Environmental conditions		Temperature: 5°C - 45°C Humidity: 20% - 80% RH Atmospheric pressure: 86 kPa - 106 kPa	
HDMI Input		RGB / 60 Hz (640×480, 800×600, 1024×768) YUV / 60 Hz (480 I, 480 P, 720 P, 1080 I) YUV / 50Hz (576 I, 576 P, 720 P, 1080 I)	

Specifications

✓ Features, appearance and specifications are subject to change without notice.

If you encountered difficulty when setting up your TV, we suggest you refer to the troubleshooting tips in the User Manual.

Item		43"
Dimension (mm)	Without Stand (W × H × D)	955 × 558 × 87 mm
	With Stand (W × H × D)	955 × 606 × 182 mm
Weight (kg)	Without Stand	6.4 kg
	With Stand	6.5 kg
Active Screen Size (Diagonal)		108 cm
Screen resolution		1920 × 1080
Audio power		7W + 7W
Power consumption		75 W
Power supply		AC 100-240V ~ 50/60Hz
Receiving systems	Analog	PAL, SECAM, NTSC
	Digital	DVB-T/T2, DVB-C
Environmental conditions		Temperature: 5°C - 45°C Humidity: 20% - 80% RH Atmospheric pressure: 86 kPa - 106 kPa
HDMI Input		60 Hz (640×480, 800×600, 1024×768) 60 Hz (480 I, 480 P, 720 P, 1080 I) 50 Hz (576 I, 576 P, 720 P, 1080 I)



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, Pro Logic, and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. Copyright 1992-2019 Dolby Laboratories. All rights reserved.